

12) DISA (PGM 140) (: DISA)

DISA

DISA가

“[/] * # [/]”
 “140”

COL SERVICE ATT
 ENTER COL RANGE

.(: 001002)

001-002 COL SVC
 F1:TYPE F2:SUB ATT

(Type, 1~5)

1

‘1’

- 1: NORMAL CO()
- 2: ANALOG DID (DID)
- 3: ISDN DID/MSN(ISDN)
- 4: TIE ()
- 5: DCO DID (DID, E1)

(: 1)

001-002 SVC TYPE (1-5)
 NORMAL CO(1)

[/] ,
 .(

DISA)

2

001-002 DISA ATT
 F1:DAY F2:NIGHT F3:WEND

1

~ 3

3가 (/ /)

.(: 1)

001-002 DISA ATT
 F1:SVC F2:VMIB

1

SVC

, ON/OFF 1

(0~1)

.(: 1)

001-002 DISA SVC
 (1: ON/ 0: OFF) : ON

[/] , VMIB/AAIB

2

001-002 VMIB ANNC
 VMIB MSG .. (00-70)

VMIB/AAIB 2 (00~70)

.(: 01)

001-002 VMIB ANNC
 VMIB MSG 01(00-70)

‘00’

VMIB/AAIB

[/] .

DISA / /

PGM 167

3가 (/ (or) /) .

VMIB/AAIB/AAFB

VMIB/AAIB/AAFB

100가

001~071, 097~098

가

, 073~096

Prompt

가

가

		()
001~070	/ / DISA UCD	“ ? LG” () “” (UCD)
071	MOH()	“ LG ...”
073	(Invalid Number Prompt)	“ ”
074	(Time-out Prompt)	“ ”
075	(Retry Prompt)	“ ”
076	(Transfer to ATD Prompt)	“ ”
078	(Leave Message Prompt)	“ # ”
079	(Record Start Prompt)	“ ”
080	(Authorization Code Prompt)	“ ”
081	(Busy Prompt)	“ ”
083	(Station Off-Net Forward Prompt)	“ ”
084	(DND Prompt)	“ ”
085	(No Answer Prompt)	“ ”
088	- (Remote-Main Menu Prompt)	“ 1 , 2 , 3 , ”
089	- 1 (Remote-Sub Menu for digit 1 Prompt)	“ 1 , 2 , 3 , 4 가 ”
091	(No more Message Prompt)	“ 가 ”
093	- 2 (Remote-Sub Menu for digit 2 Prompt)	“ # , * ”
094	- 3 (Remote-Sub Menu for digit 3 Prompt)	“ ”
095	- * (Remote-Sub Menu for digit * Prompt)	“ ”
096	~ (Leave Message after Tone Prompt)	“ ~ ”
097	SLT (MW Indication Prompt)	() “ 가 ”
098	(Default User Greeting Prompt)	() “ ”
099~100	()	

LDK-50/100/300/600 VMIB/AAIB

Prompt

30/10

VMIB

270

LDK-828 VMIB/AAFB

Prompt

28

VMIB

72

VMIB/AAIB/AAFB

- VMIB/AAIB/AAFB 2가 가
- MPB/LMUE EXT. MOH Jack .
- Prompt VMIB/AAIB/AAFB Idle .
- (001~100) Total VMIB 30 , AAIB 10 .
- (, LDK-828 VMIB/AAFB 28 .)
- ()

[/] “06”

ENTER SYS NUM (001-100)

3 (001~100)

“ (#) ” 가 ,
(Play) []

PRESS # TO START REC.

“#” “ ” “ * ”
“#” “ ~ ” 가
“ ~ ”
가 Play

Play 가 “#”

PRESS [HOLD] TO END REC.

[/]

VMIB

- VMIB
- :
PGM 113(III) (VMIB)
Enable (Disable)
- :
[/] “61” . (SLT “563” + “61”)
“ (#) ” 가
“#” [/] .(SLT Hook-Flash)
, VMIB (270 , 72)
PGM 181 ()
 ()
VMIB 1 LDK-50/100/300/600 2,000 , LDK-828
400 가
- :
[/] “66” .(SLT “563” + “66”)

VMIB

- :
PGM 112(II) (가) ON (OFF),
“ (Two-way Record)”
- “ (Two-way Record)” :
[/] + + [/] + 54 + [/]
- :
“ ”
가 “ ”
“ ”
“ ” OFF

VMIB

- :
VMIB PGM 111(I)
() ON (OFF)
, VMIB 098 (Prompt)
- VMIB :
[ON/OFF] [/] (SLT “554”)
(Type) 1 (1~4) ‘#’
(Type) 1: Unconditional()
2: Busy()
3: No Answer()
4: Busy/No Answer()
‘ ~’ [/] , LCD
VMIB
- VMIB :
(SLT [/] OFF)
“559”)

VMIB

■ VMIB

- :
가 [] ,
LCD
(SLT VMIB “097” “DND ”)
MSG: VMIB(1)
[] Play
(SLT “557” .)
가 Play 가
[] : Play (SLT “#1”)
[/] : Play (SLT “#2”)
[] : Play Play (SLT “#3”)
[] : ()

VMIB

■ :

VMIB (Remote Control)

- :
[/] “31” .(SLT “563” + “31”)
ENTER PASSWORD :
5 [/] .(SLT Hook-Flash)
PGM 227 가 . (가)
PGM 227 Bin No 001 000~

- :
DISA 가
“ * ”
Play
Dial 1: Play
Dial 2: Play
Dial 3: VMIB
Dial *: Play

VMIB/AAIB MOH

- MOH VMIB/AAIB 071 MOH
PGM 171 2 MOH) PGM 142 6 MOH) MOH
.(‘01’) ‘05’
- VMIB/AAIB MOH VMIB/AAIB 1
MOH . (, LDK-828 VMIB MOH 1)
- LDK-50/100/300/600 VMIB/AAIB 2~3 , MOH
가 VMIB/AAIB 2 MOH
‘071’ ‘0711’, ‘0712’, ‘0713’